

If the pattern has a double line around it, the seam allowances are included.

Note: By default, seam allowances are NOT included (single line) and will need to be added when laying out and cutting details.

Seam Allowance: 1 cm on all seams; hem guidelines are printed on pattern.

Important! Please print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm) to see how much fabric you will need.

Don't forget to take into account pieces to be duplicated or cut on a fold. When sewing the garment, pay attention to notches. They must match up with corresponding pieces.

2330 Top with fly piece

Recommendations on fabric:
thick natural/mixed fabrics
with elastane suitable for
dresses.


You will also need:
fusible interfacing; dress
zipper; 6 buttons

CUTTING:

The word, "beam" used on some patterns means "straight of grain". Some pieces will be cut on the fold, this is noted on the pattern piece. Mark all notches and other design features such as darts, pleats etc. from the pattern onto your fabric.

Main fabric:

1. Center back – cut 2
2. Side back – cut 2
3. Center front - cut 1
4. Side front – cut 2
5. Front fly piece - cut 1
6. Strap - cut 2
7. Back facing – cut 4

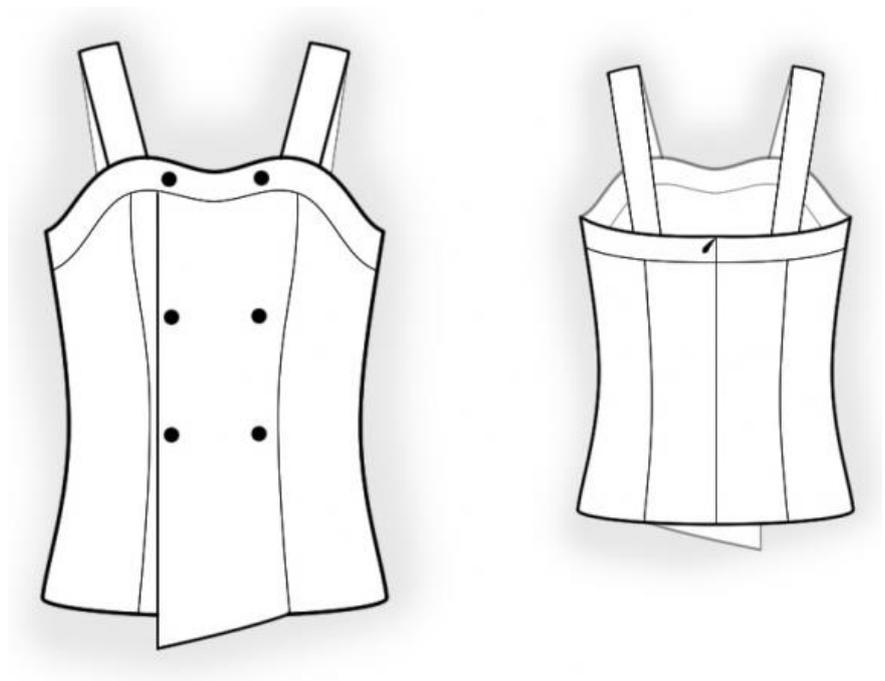

8. Front facing - cut 2

Fusible interfacing:

1. Back facing – cut 2
2. Front facing - cut 1

INSTRUCTIONS:

1. Apply fusible interfacing.
2. Fold strap in half lengthwise right sides together and sew long edge. Turn right side out, placing seam in the middle, press. Sew a decorative stitch at 0.2 cm from edge.
3. Sew side backs to center back, press towards center and serge. Sew the outer facing to Back, press towards facing.
4. Serge center back edges separately. Sew center edge from notch for zipper to bottom, press seam apart. Sew in zipper.
5. Serge the vertical and the lower edges of Fly Front Piece, press onto wrong side and topstitch. Pin Fly Front Piece onto Center Front and baste together along all edges. Sew side fronts to front, press towards center and serge. Sew outer facing to Front, press towards facing.
6. Sew side seams, press seams towards back and serge.
7. Sew side edges of back facings and front facings, serge lower edge. Pin facing to garment and sew upper edge, inserting straps on front. Clip seam allowances, turn facing under, press. Topstitch inner facing into the seam of outer facing (stitch-in-the-ditch).
8. Put on the top, adjust length of straps, serge lower edges and slipstitch them to back facing above the princess seams.
9. Serge lower edge of garment, press onto wrong side and topstitch.
10. Sew according to markings decorative buttons.

Congratulations, your top is ready! :)